

How to read code from navigation (OMAP5948):

1. Connect correct test points to main pcb
2. Connect external power to navi
3. Switch on external power
4. Connect cpt box to USB
5. Run cpt exe and select Nissan LCN in software menu
6. NOW connect RJ48 cable to cpt box
7. Click "Read Code"