



CarProTool

more possibilities




How to upgrade your regular CPT to CPT Plus


1. Open Your regular CPT Box
2. Replace all resistors to new one (check 4 pictures here)
3. Close Your new CPT Plus Programmer 😊
4. After modification MCU programming by CPT ISP ADAPTER


Blok diagram for JTAG / UART connection.




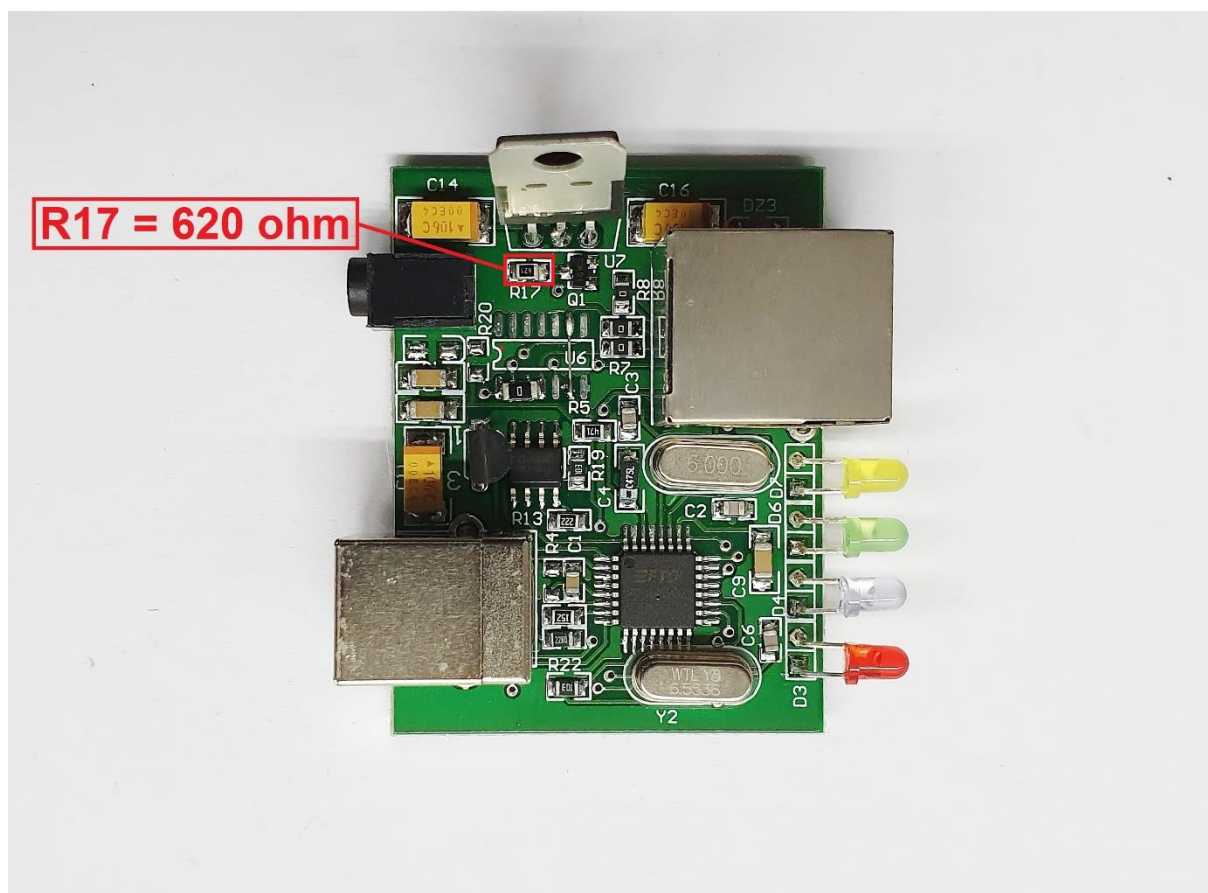

R17 = 620 ohm

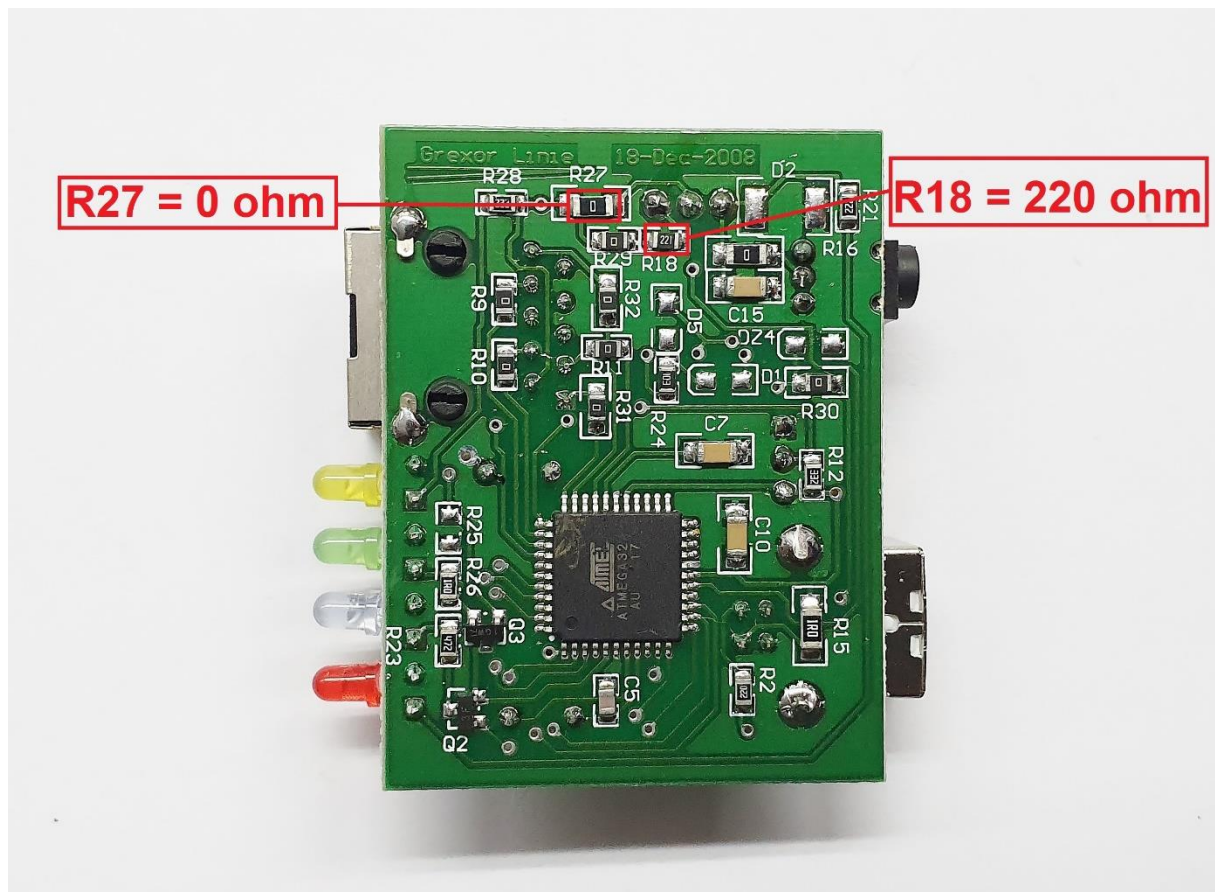

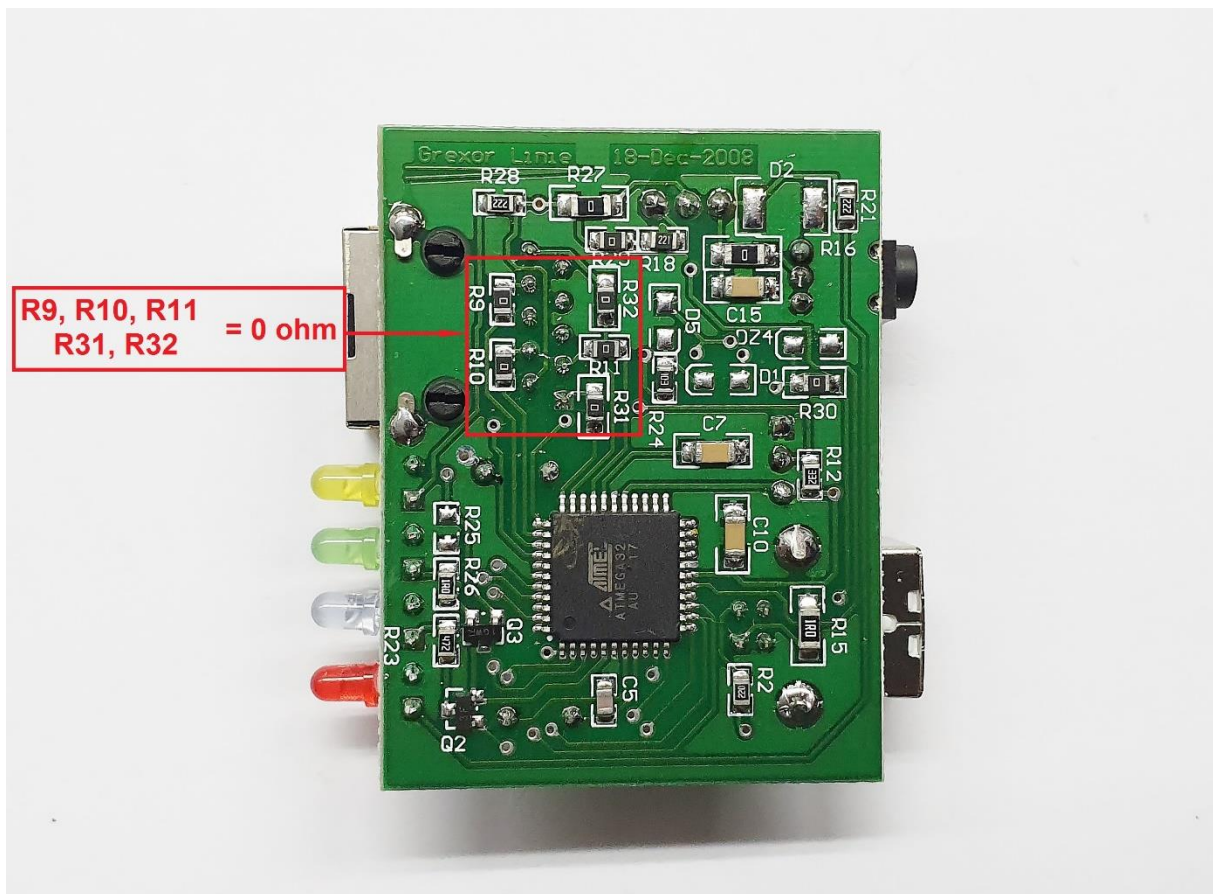

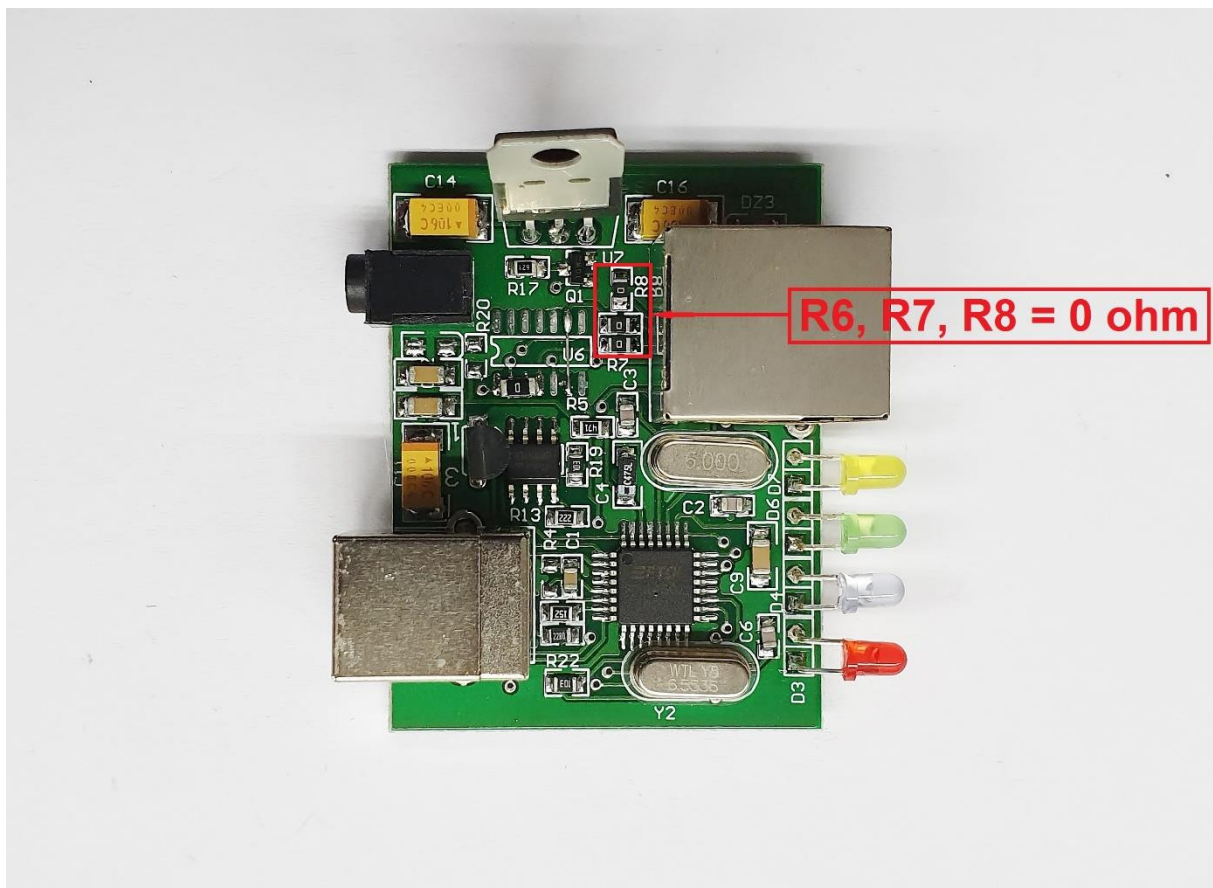

NOTE:

After modification CPT to CPT Plus use only new CPT"Plus" Power Adapter

