


FORD FUSION / LINCOLN (Renesas RH850 R7F701x)

How to create CLEAR FILE direct by CPT exe

1. Connect all test points like on connection diagram
2. Run CPT.exe and select correct CPU name and number
3. **Read** crash data bank (32 kb)
4. Save crash data bank on your HDD
5. Click **"Get Clear File"** button and add crash data bank dump file (32 kb).
6. Save your clear file on your HDD.
7. Click **"Clear"** button and add your clear file from HDD.
8. Wait for finish cpt exe work ;-)

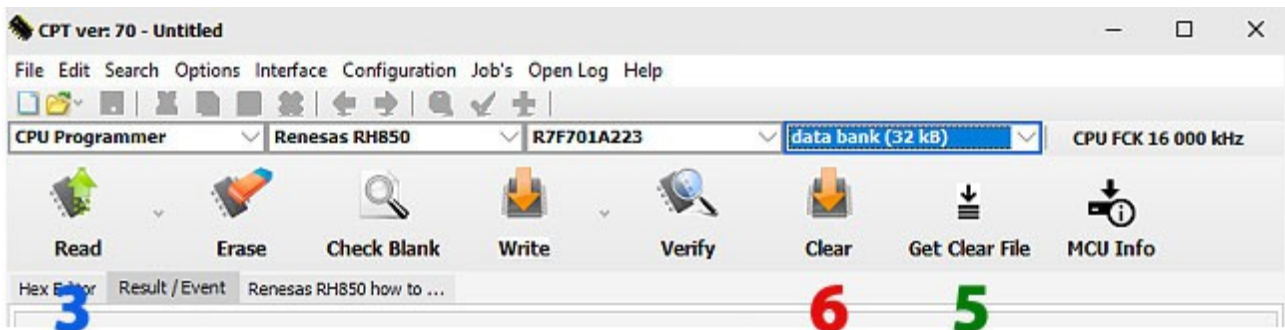

Best Regards

CarProTool Support Team